



When Switch is pushed chassis and house lugs read equal voltage so solenoid is working